








### You received your unit with:


- 1x ashtray
- 1x fire-grate
- 1x water pan holding grate
- 2x water pans
- 1x safety grate (also suitable for cooking)
- 2x stainless steel cooking grate
- 1x grate for hanging meat
- 1x cover sheet for covering the firebox if necessary

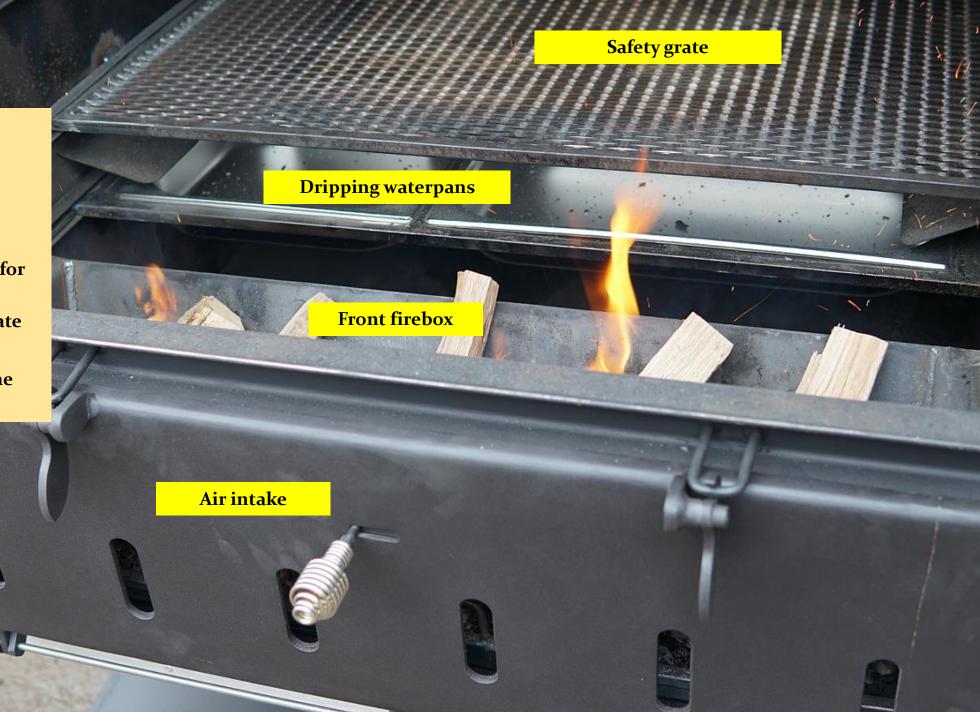







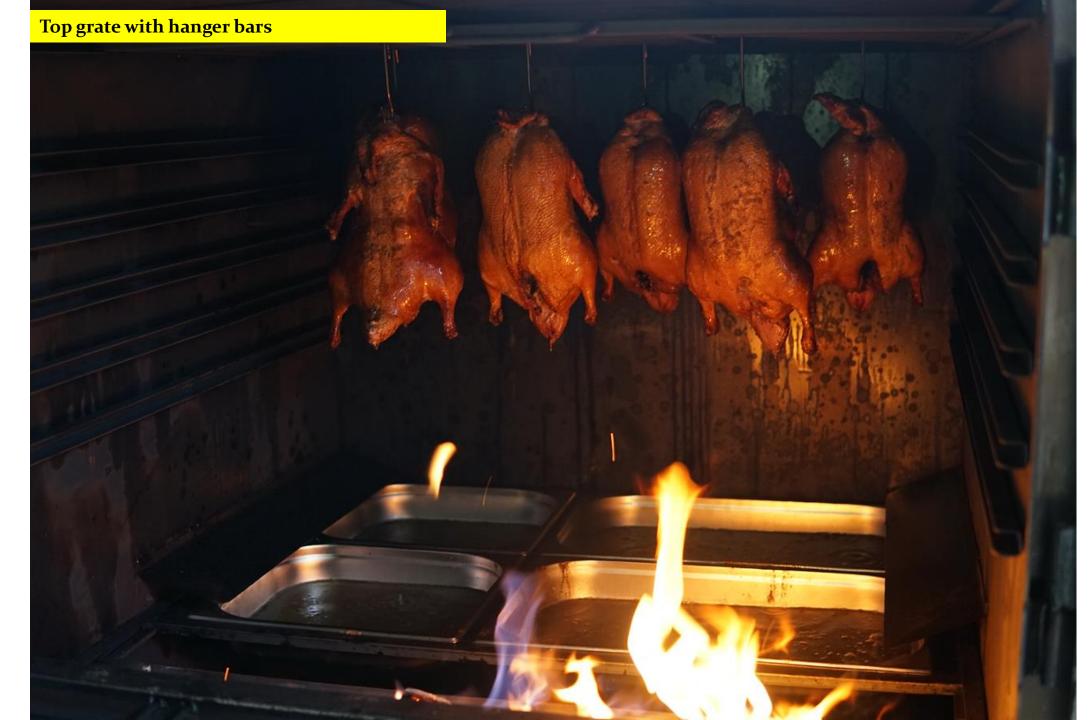












## Analogue temp gauge on the side

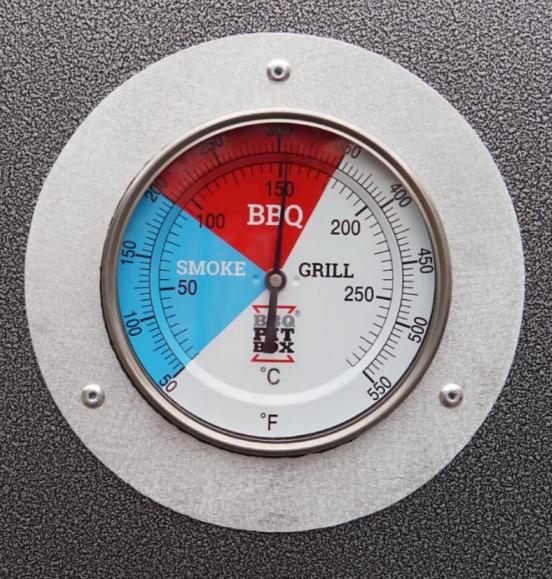




# FIRST USE, seasoning

### You must season your oven before the first cooking:

- The cooker is made of steel elements. The first "empty" burnout is extremely important as this is the first-run of the smoker, when the unwanted factory material, oil, etc., burns out. Please follow these steps:
- Remove the Water Pan and Grill Grates, wash them with detergent in warm water, then rinse with clear water and dry them. Put them aside.
- Wipe all parts of the inside of the Cooking Chamber first with a wet then a dry cloth.
- Coat the inside of the Cooking Chamber evenly with cooking oil or **duck fat**. Use a wide paint brush or an oil spritzer. Make sure to put oil in the Grill Grate Rails, as well.
- Heat up the oven. When it's close to reach the 180-200°C (350-390°F) temperature, adjust air vent and chimney to stay there. The oven should run on 180-200°C (350-390°F) temperature for 4-5 hours.
- Meanwhile coat the Grill Grates evenly with cooking oil. After 2 hours of stable operation on 180-200°C (350-390°F) temperature put the grates back into the Cooking Chamber.
- Smoking wood can be put into the firebox Seasoning / Burnout.
- The Water Pans and the stainless steel grates are not necessary for Seasoning / Burnout.
- Let the charcoal fully burn and the smoker to cool down. After this process the cooker is ready for the first real cooking.





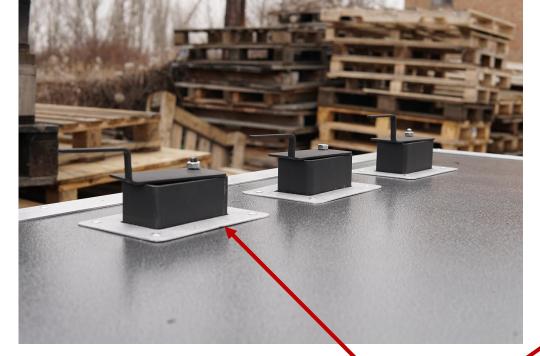




- When managing heat, use the chimney and the bottom air vent always PARALLEL.
- If the bottom air-vent is opened by ½, the chimney also ahs to opened by ½, etc.
- When you are heating up the unit, bottom and top are fully opened.
- When you start reach the desired temperature, start to damp parallel in the bottom (air-vent) and the top (chimney) to find the right position, and keep temperature where it is necessary for you.




#### **Front firebox**

- Heating-up must happen with charcoal only.
- After 40-50 minutes, when the temperature range is already around 130-150°C, you can go further by charcoal but also with firewood.
- Using firewood is typical in a bit higher temp range,
  135°C + over

- Step-o1: fill the water pans with water.
- Step-o2: fill-up the firegrate with charcoal. Add 1-2 fire lighter-cubes, and light them up. Open the airvent + the chimney fully.

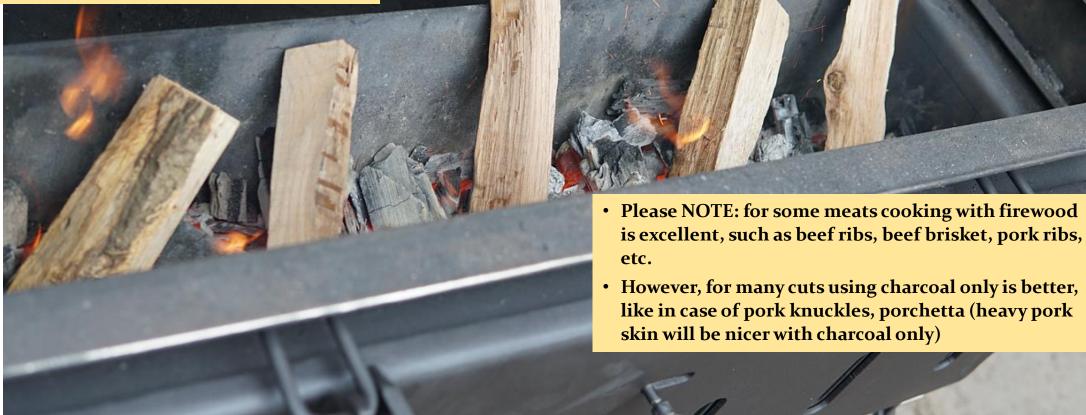



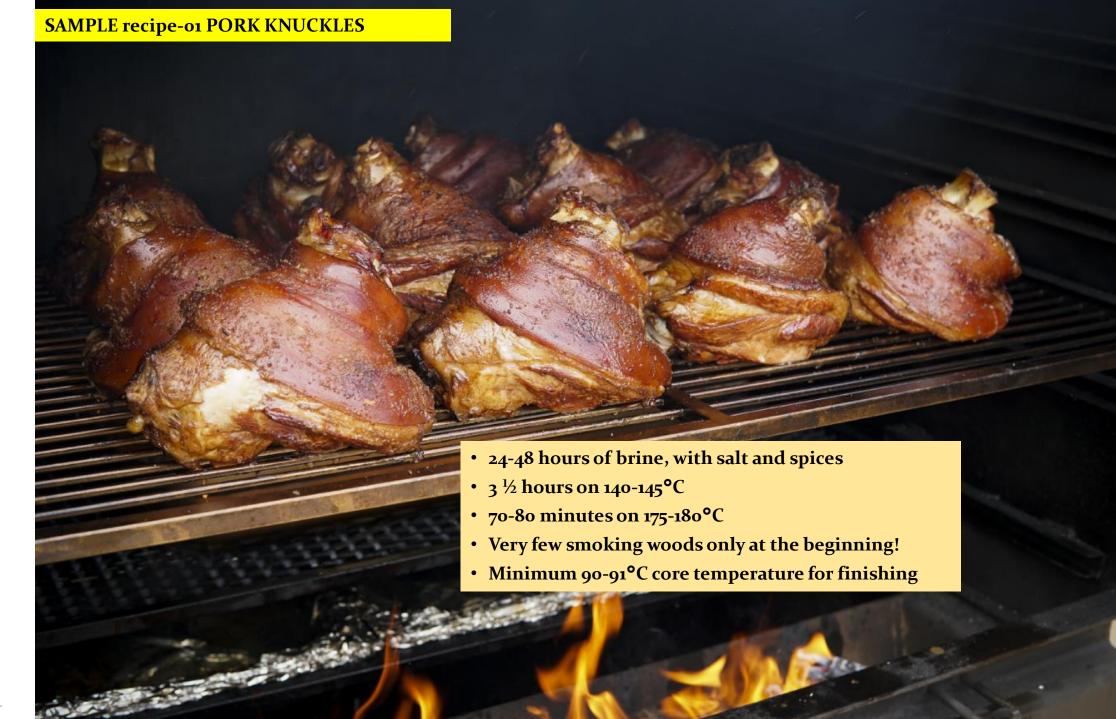







• 24 hours of marinating with dry spices, herbs and also a very little pink salt.

- 2 ½ hours on 170°C
- 30-40 minutes on 200°C
- Very few smoking woods only at the beginning!
- Minimum 87-88°C core temperature for finishing



